

HOMAIDER

USER MANUAL Electric Knife



SCAN ME

To activate your
1 year warranty

IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed:

FOR YOUR SAFETY

Read all Instructions carefully, even if you are familiar with the appliance.

- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off and remove the plug from the power outlet before removing the blades, cleaning or when not in use. To unplug, grasp the plug and pull from power outlet. Never pull power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces. Do not operate or place any part of this appliance on or near a hot gas or electric burner or in a heated oven.
- Do not operate the knife in water or under running water.
- Avoid contact with moving parts.
- Blades are VERY SHARP. Handle carefully. Always handle blades with hand away from cutting edge. Avoid direct contact with the cutting edge at all times. Always store blades with cutting edge away from you. Extreme care should be taken during assembly, while operating, disassembly and cleaning the appliance. Store out of reach of children.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- Do not use outdoors.
- Do not attempt to repair or disassemble the appliance. There are no user-serviceable parts.
- Never leave this unit unattended when it is plugged in. Keep this unit out of the reach of the children.
- Do not switch the appliance on if it appears to be faulty in any way.
- Do not attempt to cut through bones or frozen products.
- Do not attempt to cut through food that is on a metal or ceramic surface.
- Do not use the appliance if blades are broken, cracked or loose.
- Do not run this appliance continuously for more than 1 minute as overheating may occur. Allow the motor to cool down for at least 1 minute before repeat usage.

WARNING

If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


This product has not been designed for any uses other than those specified in this booklet.

SAVE THESE INSTRUCTIONS

1

EN

- Dull Edge of Blade
- Sharp Cutting Edge of Blade
- Plastic Guards
- Blade Release Button
- ON/OFF switch
- Dual Safety Switch
- Motor Housing
- Power Cord

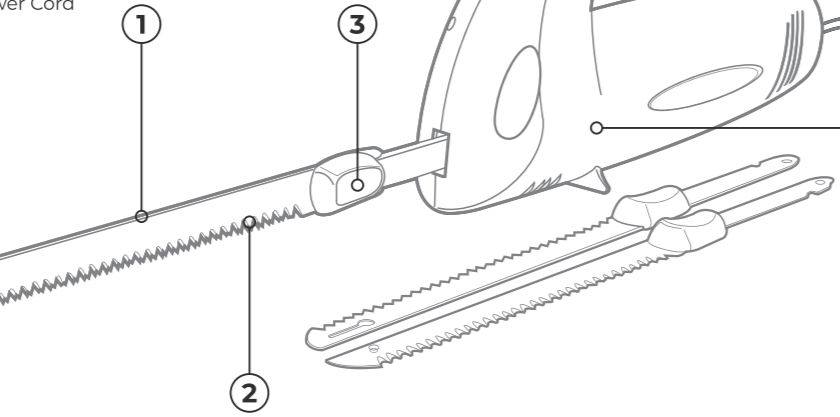

CARE AND CLEANING

Always switch off and unplug the appliance from wall outlet and ensure the knives have stopped completely before cleaning.

Please handle blades carefully to prevent cuts and injury.

Remove the blades and wash in warm soapy water, rinse and dry thoroughly.

Blades can be cleaned in a dishwasher.

The blades on the electric knife should be detached and cleaned thoroughly in warm, soapy water at regular intervals. **The blades are VERY SHARP, HANDLE WITH CARE.** Avoiding direct contact with skin and use appropriate cleaning method to wipe the blades.

The knife is factory lubricated and requires no further lubrication.

Wipe over the body of the Electric Knife with a soft damp sponge or cloth. Ensure that no water or other liquid enters the appliance.

DO NOT immerse the power handle or plug in water or any other liquid.

SPECIFICATIONS

Power Supply	AC 120V ~ 60Hz
Power Consumption	150W
MAX Continuous Operating Time	1 Minute

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.

2

GETTING TO KNOW YOUR ELECTRIC KNIFE

Congratulations on the purchase of your new Electric Knife.

Before using your new Electric Knife, it is important that you read and follow the instructions in this Use & Care booklet, even if you feel that you are quite familiar with this type of appliance. Find a place and keep this booklet handy for future reference. Attention is particularly drawn to the section dealing with "Important Safeguards".

OPERATION TIME AND CARE

To avoid the possibility of overheating and damage to the product, please avoid operating this appliance for excessive periods of time. This item should be switched off until the motor has cooled itself down.

Notes:

- Do not operate this unit for a continuous period of more than 1 minute, thereafter, switch it off for at least 1 minute to allow it to cool down to prevent overheating or damage.
- When assembling, dismantling or cleaning, always ensure that the appliance is not connected to the mains power supply.

WARNING: DO NOT IMMERSE THE UNIT IN WATER OR ANY LIQUID OR USE NEAR WASH BASINS OR SINKS.


WARNING: Beware of potential injury from misuse. Care should be taken when handling sharp cutting blades, assembling the blades and during cleaning.

BEFORE FIRST USE

- Carefully unpack the Electric Knife and remove all packaging material.
- Before using for the first time, clean the blades in warm soapy water, rinse and dry thoroughly before use.

ASSEMBLY OF YOUR ELECTRIC KNIFE

- Be sure the electric power cord is not connected to the power outlet when inserting or removing the knife blades.
- Pick up the knife blades by the grip guards, holding between the thumb and forefinger. Avoid touching the sharp, scalloped edges of the blades. (Fig. 1)
- Insert the raised rivet on the blade into the key hole slot on the other blade. This locks the ends of the blades. (Fig. 2)
- Holding the blades with the grip guards between the thumb and forefinger, and with the scalloped edges of the blades facing away from the hand, slide the ends of the blades into the opening on the front of the power handle. DO NOT PRESS THE RELEASE BUTTON WHEN INSERTING THE BLADES.

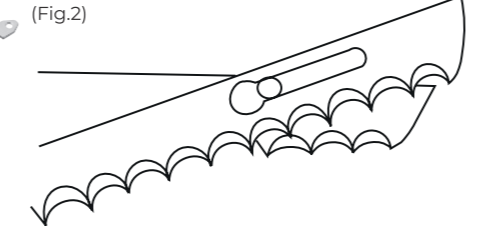

3

- Push gently on each grip guard towards the electric knife until the blades "click" into place. Make sure the blades are firmly engaged. Test the security of the blades by applying a light pressure in the reverse direction. (Attempt to remove the blades.) Cutting edges of the blades should be facing downwards, away from the handle. (Fig. 3)
- The appliance is now ready for operation. (Fig. 4)



HOW TO USE YOUR ELECTRIC KNIFE

- Before using the Electric Knife, please make sure the blades are inserted correctly. Plug the power cord into a suitable 230V~50Hz AC wall socket.
- The appliance has an incorporated power **On/Off** safety feature where the **On/Off** thumb button cannot be switched On independently to operate the appliance. To operate the knife, press and hold the **On/Off** thumb button with your thumb on top of the handle and grip and push with the remaining fingers to unlock the **On/Off** lever at the bottom of the handle.
- To cut the food, simply guide the blades through the food. It is not necessary to move the knife in a sawing motion, as the double cutting action of the two blades will slice the food quickly, easily and neatly.
- To cease cutting, release the **On/Off** Buttons. The unit will be turned off automatically. After the motor stops running, unplug it from the wall socket immediately.
- Press the **Blade Release** button and grasp the Blades by the Grip Guards with the cutting edge facing AWAY from your hand. The blades will be ejected automatically and pull the blades out away from the Motor Body.

WARNING

Caution: The cutting blades are extremely sharp. Handle with extreme care when using the appliance and when cleaning the blades!

Warning: The blades are very sharp. Before inserting or removing the blades, always unplug the main power cord from the wall socket.

CAUTION:

- Unplug the Electric knife immediately after use.
 - Do not use excessive downward force to cut food.
 - It is normal that a distinct odour may be detected from your new electrical appliance when it is operated for the first time. The user should not be concerned if this occurs.
 - The odor should clear within a short time.
- NEVER place your hand over the Blade to support it while operating this knife. The Blades are designed to slide back and forth for cutting.


WARNING

Do not run this appliance continuously for more than 1 minute as overheating may occur. Allow the motor to cool down for at least 1 minute before repeat usage.

4


HOW TO UNDERSTAND WHICH BLADE OF THE HOMAIDER ELECTRIC KNIFE IS FOR MEAT AND WHICH IS FOR BREAD?

The set includes two stainless steel carving knives: a heavy-duty blade for carving cooked, raw and frozen meat and the other for offering controlled carving of softer foods such as bread, vegetables and fruit.

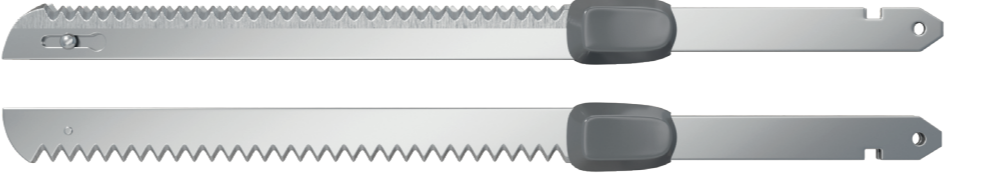


General blade

Ideal for bread, vegetables and fruit. Has additional teeth, on the side of the blade there is a longitudinal stripe.

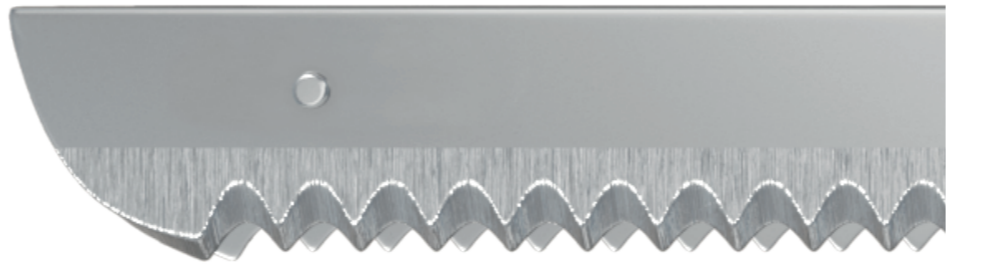

Meat blade

Ideal for cooked and frozen meat.

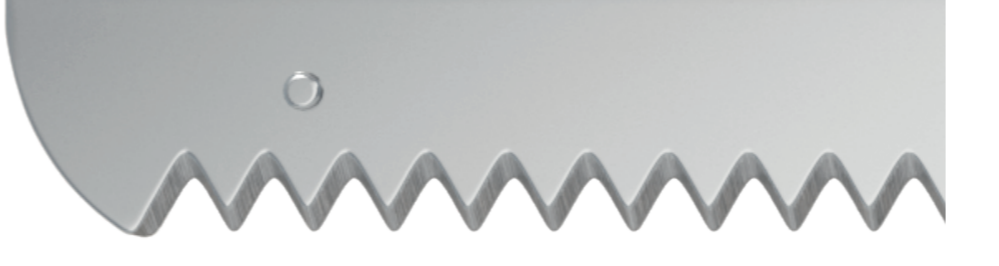

5

HAVE AN ISSUE WITH YOUR ELECTRIC KNIFE?

Enjoy hassle-free replacements: if your electric knife is defective or damaged, we will ship you a new one ABSOLUTELY FREE.

For fast and knowledgeable service, get in touch with one of our customer service experts right now!



Write a message
to support

Distributors Details

HOMAIDER LIMITED
120 Old Street, London, EC1V 9BD, United Kingdom

E-mail:
support@homaider.com

In order to register and activate your 1-year product warranty, you will be required to scan the following QR Code. Once redirected to the webpage linktr.ee/homaider, click on the «Register your product» button.



SCAN ME

Within 12 months from the day after you purchase the product, if the product has a performance failure, then you can enjoy the return or replacement service for free. To make a claim, just contact our e-mail address: support@homaider.com

6

WHY HOMAIDER?

Our company is an open organization that is attentive to the voice of the consumer, engages in direct dialogue with the consumer, gives the opportunity to influence on the product, determine its present and future.

By developing exclusive new products, the company doesn't rest on its laurels and strives for perfection in every detail to create the best possible user experience.

We value our customers, we are open to dialogue, we provide through our quality and useful products solutions to their problems, we provide support, we lead an active social life!

Follow us on Instagram

@homaiderproducts



SCAN ME

7

Thanks for choosing us!

HOMAIDER

If you liked our product, recommend it to your friends, post a photo on Instagram using the #homaiderproducts hashtag and tag our page @homaiderproducts